

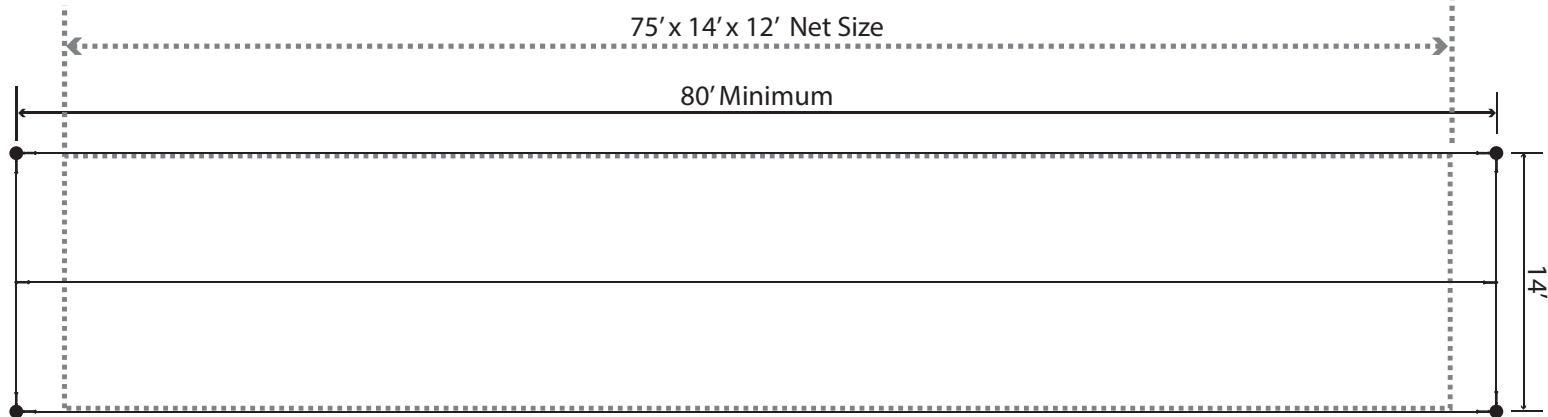


UNITS	REF #	DESCRIPTION
4	1	Corner poles 8-5/8" x 16' Long
4	2	Eyebolts 1/2"-13 x 9-3/16" Long with Lock Nut
8	3	Washers, 1/2"
2	4	Quick Links, 3/8"
8	5	TB-12 Turnbuckles
20	6	Cable Clamps, 1/4"
300'	7	Steel Cable, 1/4"
100	8	Carabiner Clips, 8mm

**POST LAYOUT / SPACING**

1. Post spacing for the width should be the same as the net width (center-to-center of poles).
2. For the length, add at least 5' to the net length (usually 55', 70' or 75' – so posts would be 60', 75' or 80').
3. Make sure posts are lined up correctly with the tabs facing in and the hole lining up with the length as shown above (main layout diagram).
4. Suggested footing details shown, consult local soil conditions.

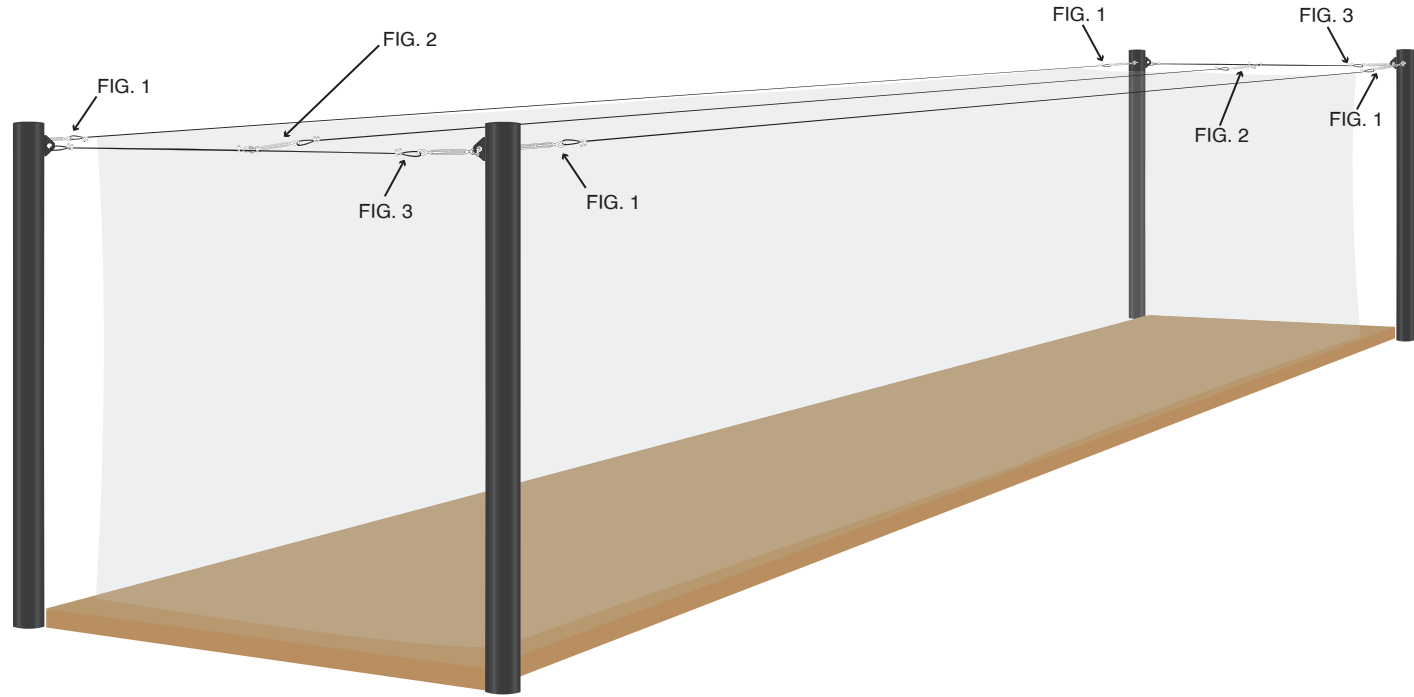

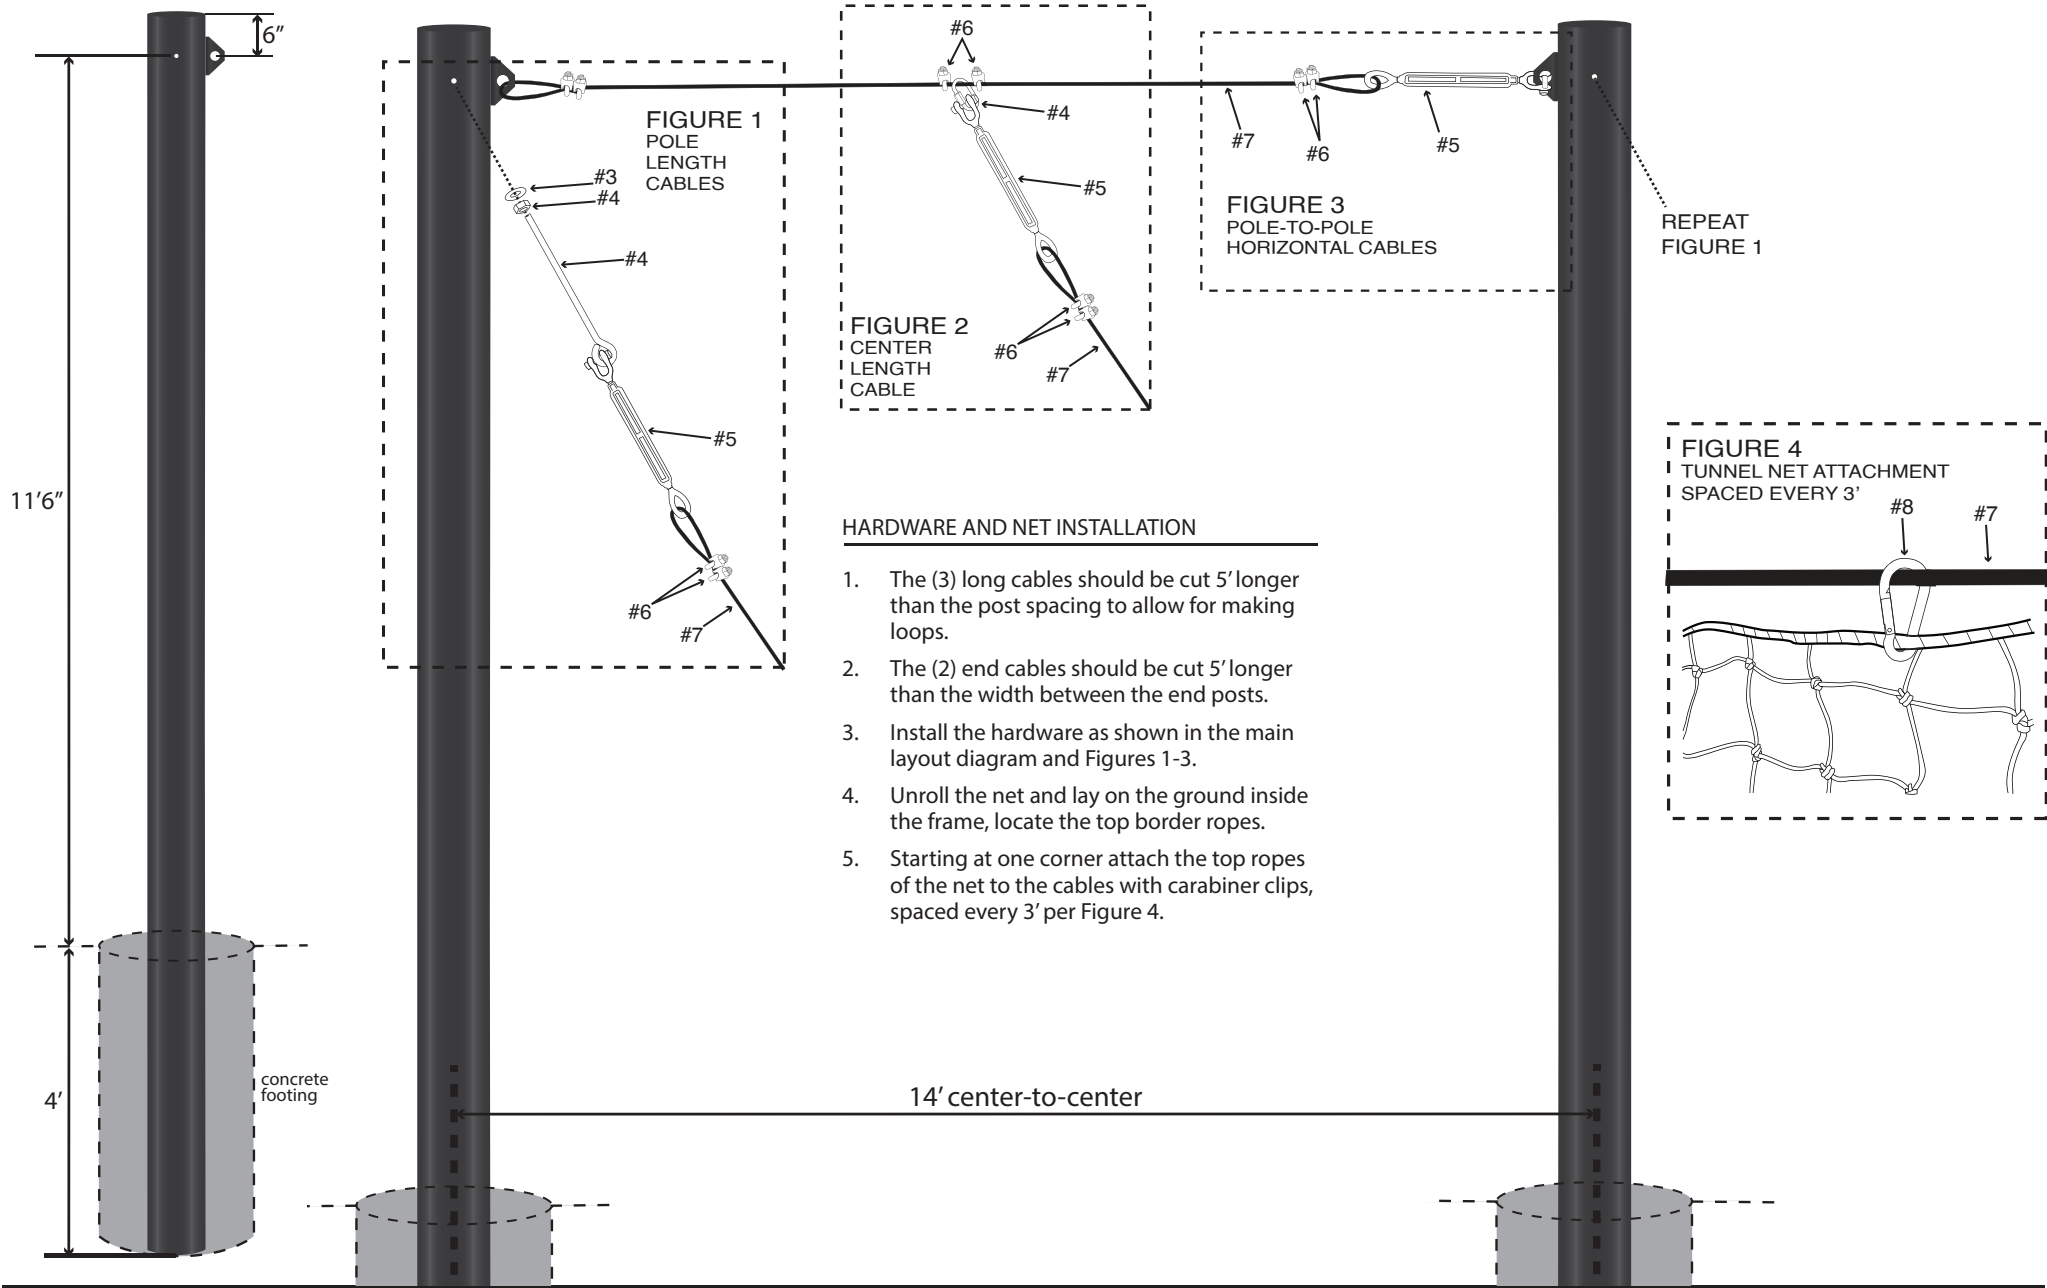

**HARDWARE AND NET INSTALLATION**

1. The (3) long cables should be cut 5' longer than the post spacing to allow for making loops.
2. The (2) end cables should be cut 5' longer than the width between the end posts.
3. Install the hardware as shown in the main layout diagram and Figures 1-3.
4. Unroll the net and lay on the ground inside the frame, locate the top border ropes.
5. Starting at one corner attach the top ropes of the net to the cables with carabiner clips, spaced every 3' per Figure 4.