

Item # 26300

PARTS LIST:

- | | | |
|---|---|--|
| <ul style="list-style-type: none"> • Chalk Line • Impact Gun/Drill • Level • Chalk/Marker | <ul style="list-style-type: none"> • FASTENING HARDWARE:
Tapcon Hex Head:
1/4" x 1-3/4" OR Drive
Pins/Mushroom Anchors:
1/4" x 1" Long | <p>*Mounting hardware requirements vary per application. Fastening hardware is not included and appropriate fasteners need to be purchased separately.</p> |
|---|---|--|

- Z-Clips (Quantity based on order size)
- *Never install Z-Clips prior to receiving pads.



Determine the overall height where the wall pads will be installed. If the pad is not installed at the wall height, use a chalk line to mark a horizontal line to represent where the top of the pads will line up. For example, if the pads are 72" high and you want to install them 4" above the finish grade to allow for clearance, the top of the pad will need to be installed at 76".


STEP 2:

Lay the first pad on the ground, backside facing up, and fully connect the provided wall z-clips with the corresponding z-clips that are preinstalled on the backside of the pad.

STEP 3:

To determine the upper z-clip placement, take a measurement from the top of the pad to the lower edge of the wall z-clip. This is the distance you will measure down from the top of the wall, or from the horizontal chalk line created in STEP 1. Snap a second horizontal chalk line on the wall at this height.

STEP 2 & 3

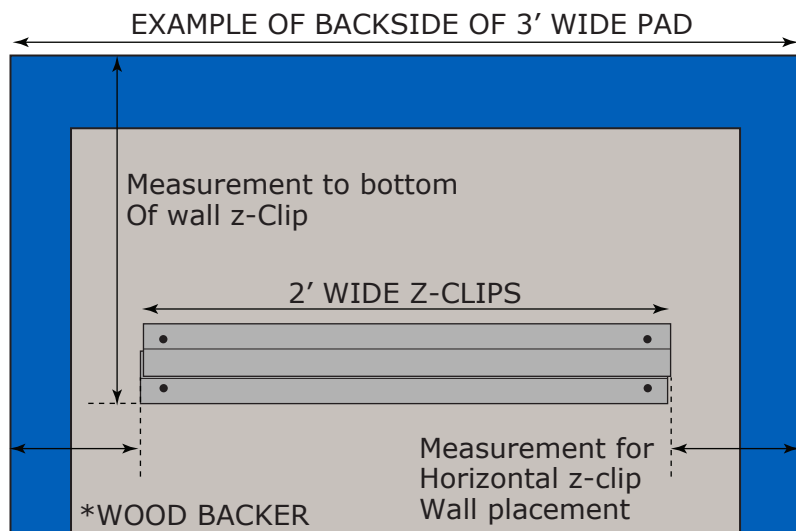

STEP 4:

Measure for the lower z-clip location in the same manner, except add 1/8" to the measurement from the top of the pad. This allows for a margin of flexibility. Chalk line #4 represents the bottom of the pad, and Chalk line #3 marks the bottom z-clip location.

STEP 5:

From the backside of your pad, measure the horizontal inset of the z-clip on both sides. On your wall, starting where you want the edge of the first pad installed, use a wall z-clip as a template. Align the bottom edge of the z-clip on the #2 chalk line and mark the drill locations to the inset measurement of the back of your pad. Use a level to ensure your marks are even.

STEP 6:*

Next, mark a vertical line at the end of the z-clip to mark placement for the bottom z-clip location (#3 chalk line). Again, use the z-clip as a template

STEP 7:

Work your way down the wall in small increments and mark the two z-clip locations as described in STEPS 3 through 6. Ensure that all vertical and horizontal chalk lines are level.

STEP 8:

Pre-drill accordingly and install the first set of clips using the appropriate fasteners. Ensure the bottom of the clips line up with the #2 and #3 chalk lines. Hang the first pad and check your horizontal alignment with a level. Both of the top and bottom z-clips should engage.

***Larger size pads require three z-clips.** Follow STEPS 4 through 6 and snap a third chalk line to mark the additional clip location.

